Riing 2 Sync RGB



Radiator Fan RGB Sync Edition

Parts List



Fan



(3) x 1 **PWM Cable**



(x 1






① x 12 **Short Screw**



 
♠ x 12 Long Screw

Installation Guide



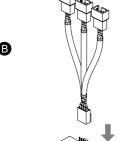






Connect the fan power cable to PWM cable.

Connect the PWM cable to mainboard.




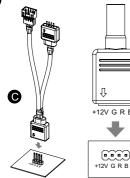

⚠ CAUTION

Please power off the PC and check the **Positive and Negative** ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the controller.

Connect the mainboard sync cable to mainboard.

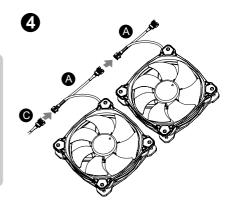

Connect the mainboard sync cable to fan led cable, and connect the fans in series.

